



## Hyper-extension Stop Adjustment

- 1) Loosen the center screw (A) that is closest to the set screws
- 2) Adjust set screws (B) to desired position
- 3) Re-tighten center screw (A) to lock set screws in position





